

200W AUDIO PACKAGE

OLYMPIC

Party Hire

1

WHAT'S INCLUDED:

SPEAKERS ●

2 x 10" BEHRINGER 200W

SPEAKER STANDS ●

2 X PROSTANDS (TRI-POD STYLE)

AUDIO JACK > 3.5MM AUX ●

 

CONNECTS SPEAKER TO YOUR DEVICE

XLR CABLE MALE > FEMALE ●

CONNECTS TWO SPEAKERS TOGETHER

POWER CABLES ●

2 X IEC LEAD TO POWER SPEAKERS

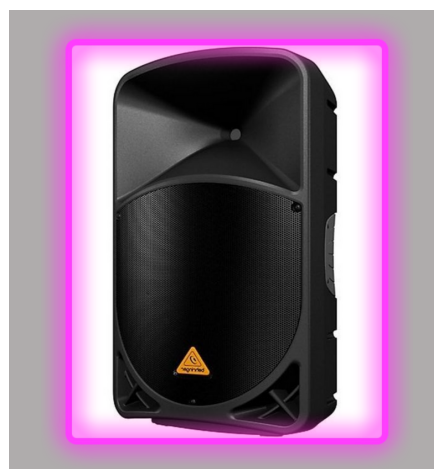

SET-UP INSTRUCTIONS:

1

- Plug power cables into speakers/mains and leave switched off

2

- Connect black audio jack to **1/4 INCH INPUT** on the back of either speaker system

3

- Connect 3.5mm AUX to audio device (phone, laptop etc.)

4

- Connect XLR cable from **LINK OUTPUT** (female) on speaker to the **XLR INPUT** (male) on the second speaker.

5

- Turn on speakers, begin playing music, adjust volume with **LEVEL** control and adjust **EQ HIGH & LOW** to preferred level (on each speaker).



NEED HELP?
CALL OUR OFFICE

8388 5545



FEMALE



MALE

FLIP!

FIND OUT MORE AT WWW.OLYMPICPARTYHIRE.COM.AU

200W AUDIO PACKAGE

OLYMPIC

Party Hire

2



NEED HELP?
CALL OUR OFFICE
8388 5545



FIND OUT MORE AT WWW.OLYMPICPARTYHIRE.COM.AU