

OLYMPIC

Party Hire

Olympic Party Hire

63-65 South Road

Thebarton SA 5031

Ph: 08 8346 5545

E: info@olympichire.com.au

Silent Disco Package –

Includes – Transmitter + power cord, Headsets & Aux Cord



1. Connect your transmitter to power (or run for a short time on battery)
2. Connect your transmitter to your media device via AUX cable
3. Set transmitter to one of the 3 available channels (no 2 transmitters can be on the same channel setting or else they will conflict)
4. Test headsets by holding the 'tune/on' button down. Clicking tune will flick between the different channel settings (generally shown by the colour on the side of the headset – red , blue, green)
5. Adjust the volume of your headset via the control clicker. Note sometimes you may need to hold the 'volume up' as the low volume settings are very quite!
6. Remember the headsets are battery powered, so when not in use, turn off!
7. Enjoy

Watch 2 Minute Tutorial on the Silent Disco by clicking Vimeo Link below!

<https://vimeo.com/413355243>

If you have any questions, feel free to call our office on 8346 5545.