

SPEAKER AUDIO PACKAGE

OLYMPIC

Party Hire

WHAT'S INCLUDED:

SPEAKERS

2 x BEHRINGER SPEAKERS

SPEAKER STANDS

2 X PROSTAND (TRI-POD STYLE)

RED/BLACK JACK > 3.5MM AUX



CONNECTS SPEAKER TO YOUR DEVICE

POWER CABLES

2 X IEC LEAD TO POWER SPEAKER

XLR CABLE MALE > FEMALE

CONNECTS TWO SPEAKERS TOGETHER

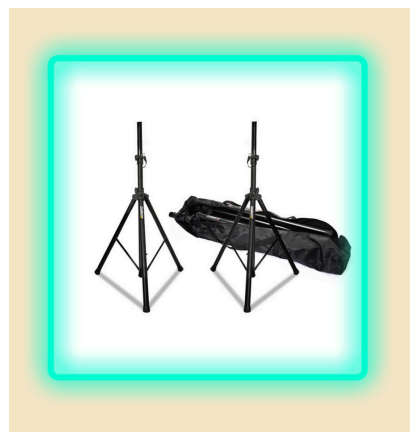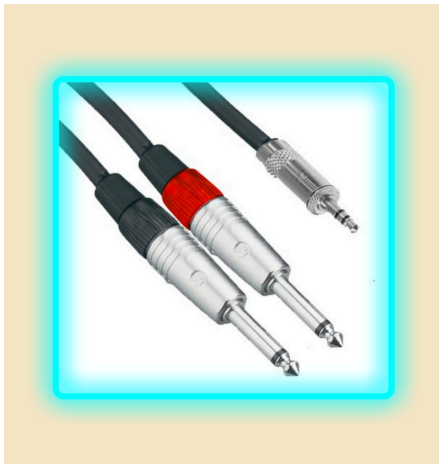

SET-UP INSTRUCTIONS:

- 1 • Plug power cable into speaker/mains and leave switched off
- 2 • Connect red & black audio jacks into **INPUT 1 & INPUT 2** on the back of the first speaker
- 3 • Connect AUX to audio device (phone, laptop, etc)

- 4 • Connect XLR cable from **LINK OUTPUT** (female) on first speaker to the **INPUT 1** (male) on the second speaker
- 5 • Turn on speakers, begin playing music, adjust volume with **INPUT 1 & 2** control and adjust **EQ HIGH & LOW** to the preferred level (on each speaker)

FEMALE



MALE

FLIP!

OUT OF HOURS SUPPORT: 8346 5545 (follow prompts)


550W/1000W AUDIO PACKAGE

OLYMPIC

Party Hire



1st Speaker

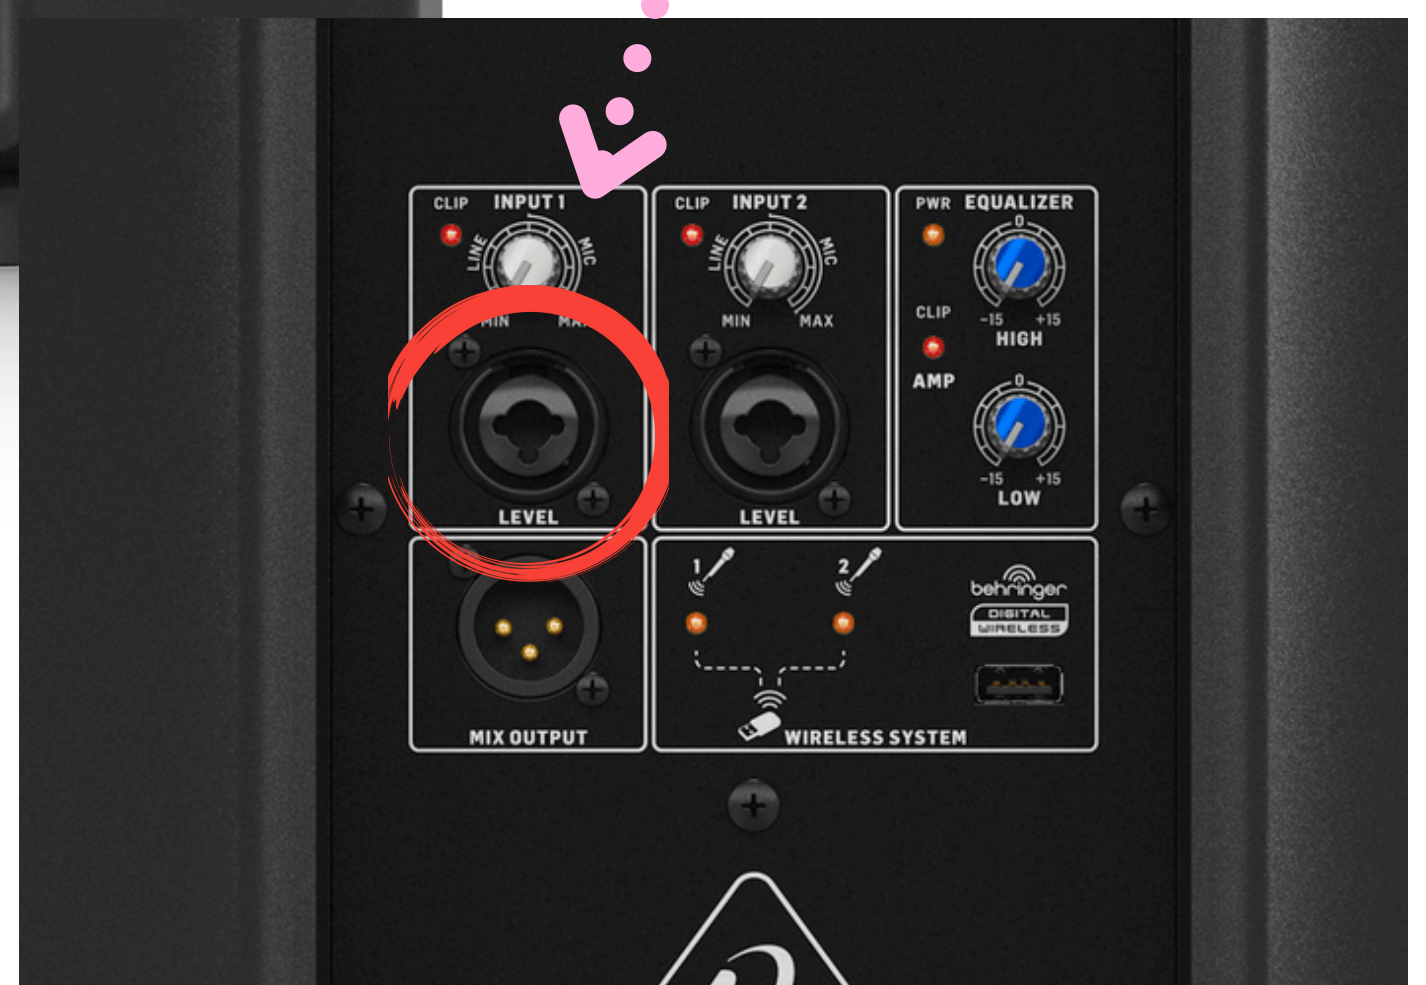

2nd Speaker

OUT OF HOURS SUPPORT: 8346 5545 (follow prompts)

WIRELESS MIC TO DUAL SPEAKERS

OLYMPIC

Party Hire



1st Speaker




SET-UP INSTRUCTIONS:

- 1 • Plug power cable into the back of the mic receiver. Ensure the microphone switch is set to **MUTE** and turn the microphone on. Remove **AUX** cable from **INPUT 2** on the **FIRST SPEAKER**

- 2 • Connect XLR audio cable (Male) into **INPUT 2** on the back of the **1ST SPEAKER** and (Female) **BAL** port on the receiver box. Ensure the **INPUT 2 VOLUME** is turned down

- 3 • Ensure the **BANK & CHANNEL** is set to the same as the microphone. Adjust using **SET SCAN** and **CH+/CH-** to find the desired channel.

- 4 • **Unmute** the microphone, speaking into it to ensure it is working properly. Adjust **INPUT 2 VOLUME** to your desired preference

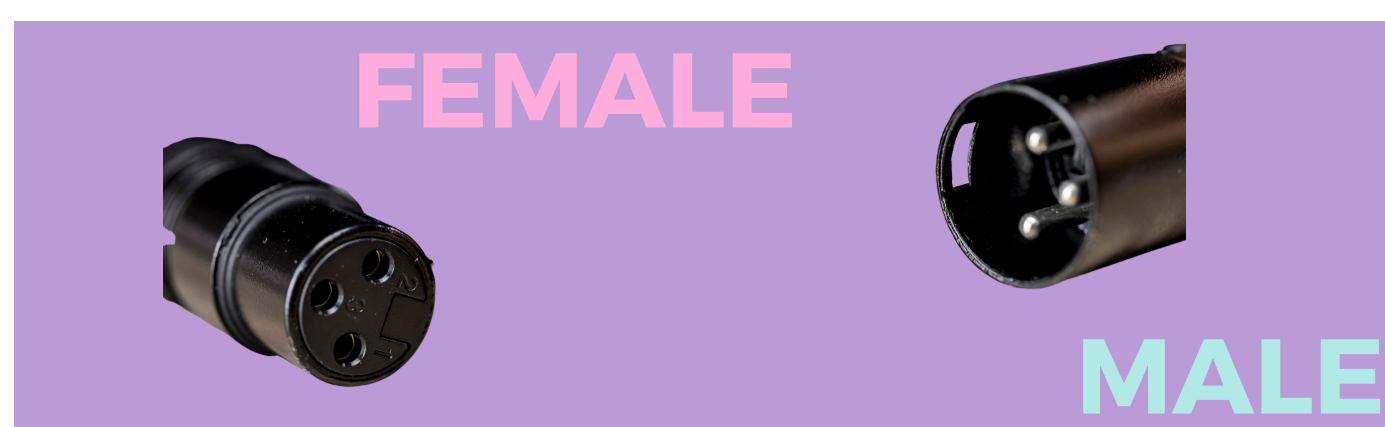

OUT OF HOURS SUPPORT: 8346 5545 (follow prompts)