

AUDIO PACK WITH MIC/MIXER

OLYMPIC

Party Hire

WHAT'S INCLUDED:

SPEAKERS ●

2 x BEHRINGER SPEAKERS

WIRELESS MIC ●

SENNHEISER BATTERY PWR MIC
WITH XLR RECEIVER

SPEAKER STANDS ●

2 X PROSTANDS (TRI-POD STYLE)

RED/BLACK JACK > 3.5MM AUX ●

CONNECTS DEVICE TO MIXER

5 X XLR CABLE MALE > FEMALE ●

CONNECTS SPEAKERS/MIC RECEIVER TO MIXER

MIXER ●

AVE 6 CHANNEL MIXER



SET-UP INSTRUCTIONS:

- 1 • Plug power cables into speakers, and mixer - leave switched off.
- 2 • Connect red & black audio jacks into **LINE 1 & LINE 2** on the mixer
- 3 • Connect AUX to audio device (phone, laptop etc.)
- 4 • Connect XLR cord (female) into back of microphone receiver box and plug the male end into **LINE 3** (male) on the mixer.
- 5 • Connect XLR cables (female) from **MAIN OUTS L & R** (top right of the mixer) to **INPUT 1** on one speaker and **INPUT 1** on the second speaker.

- 6 • Ensure volume is set to 50% with dials pointing up on **INPUT 1** on both speakers. Ensure volume sliders on the mixer are all the way down (white, red, yellow and green). Ensure **gain** and **EQ** knobs are turned to center detents (0 value)
- 7 • Switch on power for speakers/mixer/XLR microphone receiver box. Begin playing music/speaking as you gradually adjust input volumes (on back of speakers) and volume sliders (on mixer) to a desired level. Adjust **EQ** values, if necessary.



OUT OF HOURS SUPPORT: 8346 5545 (follow prompts)

AUDIO PACK WITH MIC/MIXER

OLYMPIC

Party Hire



OUT OF HOURS SUPPORT: 1300 161 024 8346 5545 (follow prompts)