

WHAT'S INCLUDED:

Pancake Machine Package

- Includes automated machine
- 2 x bag of pancake mix (up to approx 40 pancakes per bag)
- Additional bags are \$27 each



SET-UP INSTRUCTIONS:

1. Plug In & Power On

- Press the Power button. Display reads: "Warming Up" (~6 mins).

2. Prepare the Mix Bag

- Fill a water bottle with room temp water, insert cap, and splash water out.
- Shake the bag to settle the mix.
- Empty the water bottle into the bag, replace the cap.
- Knead for 20 seconds, then shake the bag for 30 seconds until fully expanded.
- Let it rest for 3-5 minutes.
- Shake again for 30 seconds, remove air, tighten cap.

3. Load the Bag

- Open top lid, insert the bag's nozzle into the splash guard.
- Slide the tail between the rods and pull through completely.
- Close the lid and press OK on the display when prompted.

MAKING PANCAKES:

- Press OK once to make 2 pancakes (~1 min).
- The display shows a bar for remaining mix (F=full, E=empty).
- When empty, it prompts "Change Bag Now". Load a new bag.

SHUTTING DOWN:

- Press Power to start shut down.
- Display reads "Unload Bag Now". Remove and dispose of bag.
- Fans run ~30 mins to cool down (do not unplug during cooling).

CLEANING & MAINTENANCE:

- ✓ Clean belts, splash guard, crumb tray, and filters weekly.
- ✓ Do not use sprays on belts.
- ✓ Always use room temperature water for mix.

TROUBLESHOOTING:

- ⚠ Pancakes stick? - Water temp not room temp or mix too old.
- ⚠ Overheating? - Clean fan filters.
- ⚠ "Check/Change Bag" error? - Mix too thick. Add water, re-shake.
- ⚠ Belts need changing? - Follow display prompt and enter belt code.

NEED HELP?
CALL OUR OFFICE

8346 5545

