

SILENT DISCO GUIDE

OLYMPIC

Party Hire

WHAT'S INCLUDED:

SILENT DISCO

HEADSETS

ALL DISCO, NO NOISE

TRANSMITTER

UPTO 30M OF RANGE

BLACK 3.5MM AUX CABLE

CONNECTS TRANSMITTER TO YOUR
DEVICE



SET-UP INSTRUCTIONS:

- 1 • Connect the antenna to the **Transmitter** and the plug power cable into the back of the **Transmitter**

- 2 • Connect the **AUX CABLE** to the back of the transmitter and to your audio device

- 3 • Switch the frequency from **OFF** to **HIGH**

The **CHANNEL** Switch can be left as is, however if using more than one transmitter, ensure they are set to different channels

- 4 • Press and hold the **TUNE/ON/OFF** button to turn the headsets on. It will begin flashing and stop when synced to the transmitter. Volume can be adjusted via the dial on the headset. To change between channels, simply tap the **TUNE/ON/OFF** button.

- 5 • Begin playing music. The Transmitters are battery powered, However we recommend having them plugged in during your event

OUT OF HOURS SUPPORT: 8346 5545 (follow prompts)

SILENT DISCO VIDEO GUIDE

OLYMPIC

Party Hire

COMMON PROBLEMS:

**NO AUDIO PLAYING
THROUGH ANY HEADSETS:**

Ensure the Transmitter is set to **HI** and if using multiple Transmitters, they are all set to different channels

**NO AUDIO PLAYING
THROUGH 2-3 HEADSETS:**


Headsets may arrive with the volume all the way down, appearing broken. Use the **Volume** switch to increase volume until music is audible

**HEADSETS PRODUCING
STATIC:**

Audio may sound static or fuzzy if the **Antenna** is not securely connected to the transmitter.

A faulty **AUX** adapter or cable may also be the culprit, so ensure all jacks are inserted properly.

A User may also hear static if not in direct line of sight, as signal can be affected by thick walls or other obstructions

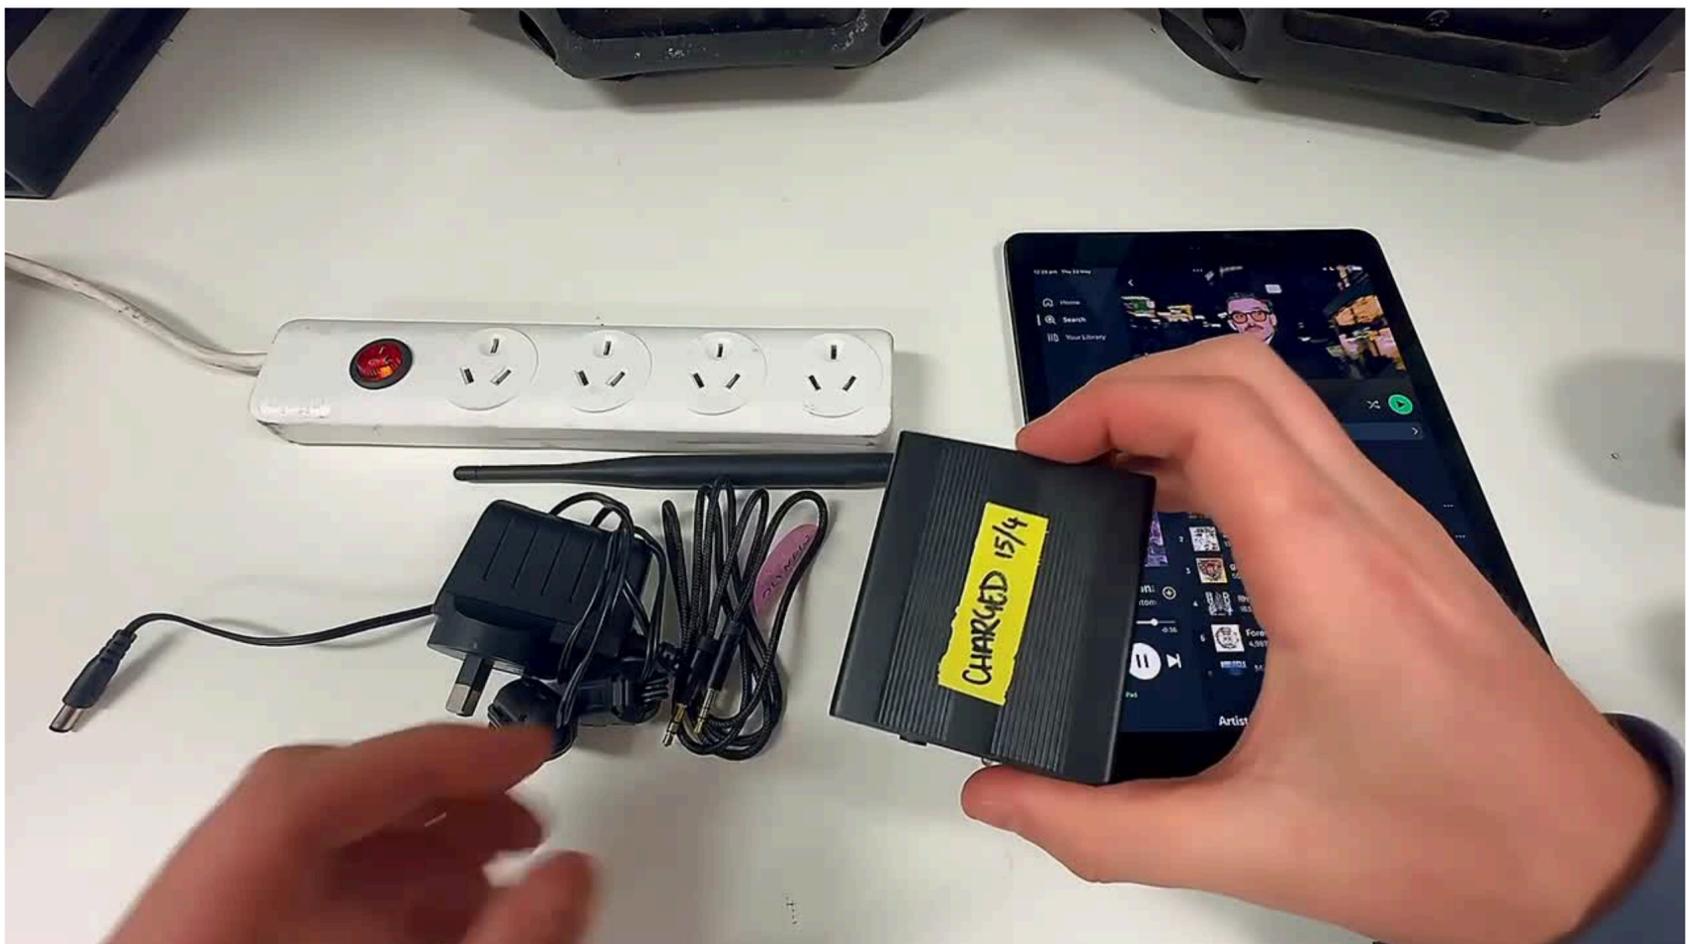

OUT OF HOURS SUPPORT: 8346 5545 (follow prompts)